
COMMSCSPE[®]

Installation Instructions

TC-96227-IP Rev C, May 2020 www.commscope.com

Vertical Cable Guide Accessory Kit, EHD (VERT-CBL-BKT-EHD)

NOTE: This kit is NOT required when a rack-mounted Vertical Cable Manager is used (see photo below).

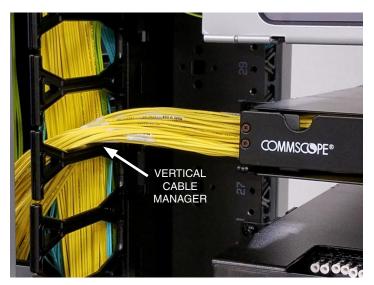

Procedure

If a Vertical Cable Manager is NOT used, follow this procedure to install the Vertical Cable Guide Accessory Kit.

(1) Locate the mounting position for the kit on the existing shelf. The kit will be mounted near the lower portion of the panel on top of the existing shelf mounting bracket (see photo below).



Kit Contents (760237813)

- 12-24, 3/4" FASTENER (Qty 2)
- M6x1, 20mm FASTENER (Qty 2)
- VERTICAL CABLE GUIDE, EHD (3") (Qty 2)

(2.) Mount the Vertical Cable Guide Accessory Kit in the orientation shown below using the screw provided in the kit. See back page for mounting positions.




(3.) Connect Fiber Patch cords to module and run the cables out of chassis and over the accessory kit Vertical Cable Guide. Do this for both sides of the chassis.



(4.) See back page for exploded views of kit installation with different EHD models.

The views below show recommended installation positions of the Vertical Cable Guide Accessory Kit, EHD, on different panel models.

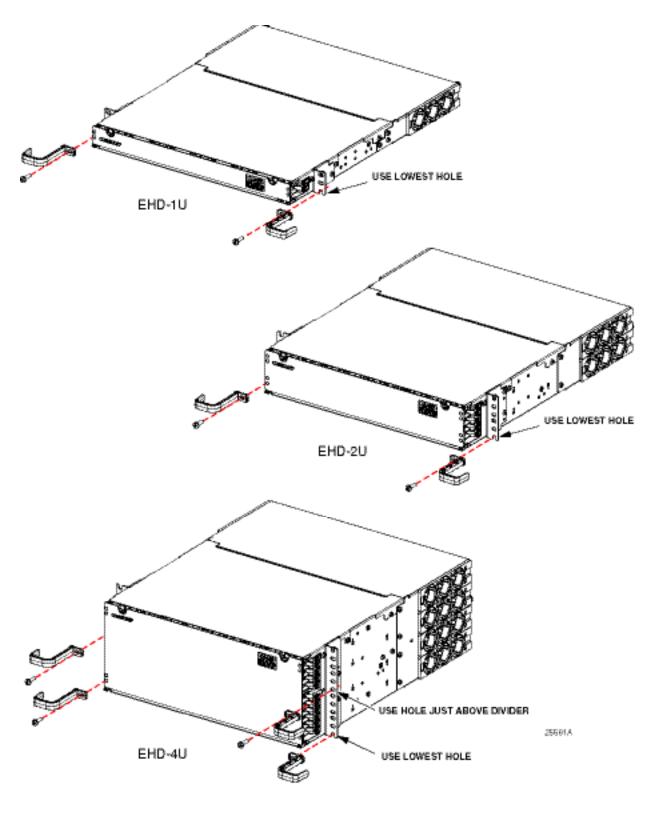

COMMSCSPE[®]

Page 2 © 2020, CommScope, Inc. All Rights Reserved. For product support, visit our website at http://www.commscope.com/SupportCenter For information on product patents, go to http://www.cs-pat.com