

## Installation Instructions

## Hybrid Combiners CHB726-01 and CHB726-01-2X

### Please read this manual carefully before starting the mounting.

#### 1 General

This instruction bulletin provides information on how to properly install the Hybrid combiners CHB726-01 and CHB726-01-2X. The mounting of combiner must be conducted by certified and experienced personal and be conformed to the local safety regulations.


#### 2 Necessary parts and tools:

Included on the Box:

Item #	Qty	Description
1	1	Hybrid Combiner with mounting bracket attached.
2	2	Band Clamp

### A. Combiner



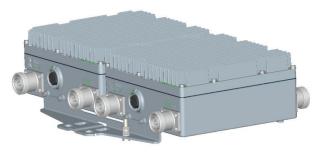

CHB726-01-2X

B、 Band Clamp



- Mounting tools (NOT included)
- A. Hexagonal socket wrench.
- B、Inner hexagon wrench (5m).



Page 1/3 www.commscope.com



# **Installation Instructions**


## Hybrid Combiners CHB726-01 and CHB726-01-2X


#### Mounting 3

### Mounting on a Wall

Use the Combiner footprint as a drill template, to mark hole positions.


**Fasten the Combiner with four** screws.

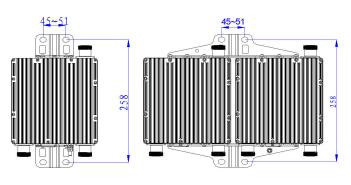

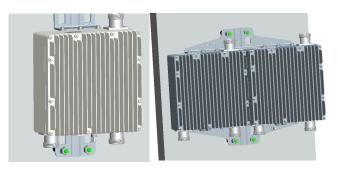

# **Mounting on a Pole**



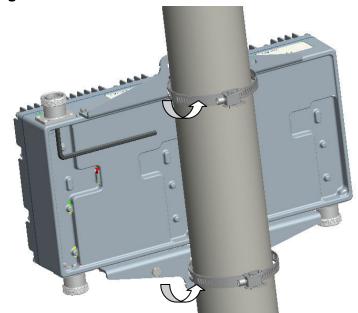




Page 2/3 www.commscope.com




# **Installation Instructions**

# Hybrid Combiners CHB726-01 and CHB726-01-2X

### **Connecting RF Cable and Sealing Connector**

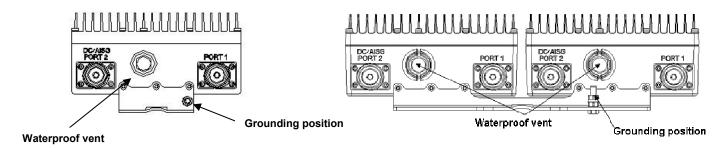

Note: Do not cover the waterproof vent

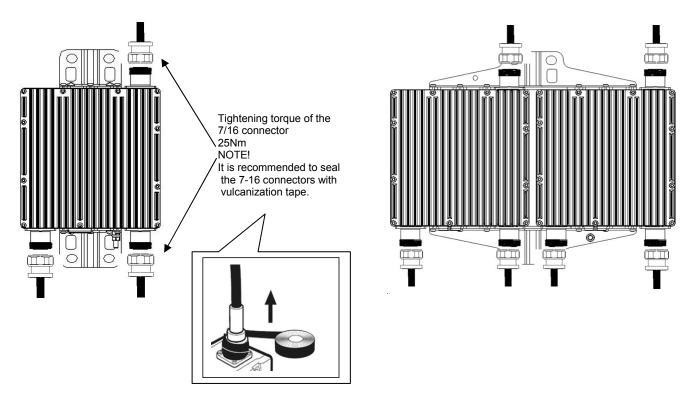

#### 4 Maintenance

Please prevent the Combiner from scratch or collision when mounting or moving. No special maintenance needed except in extreme weather conditions or disasters.



Visit our Web site or contact your local CommScope representative for more information.

Page 3/3

02/13 Rev1

www.commscope.com