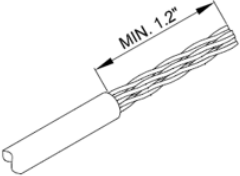
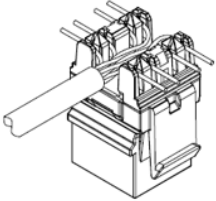
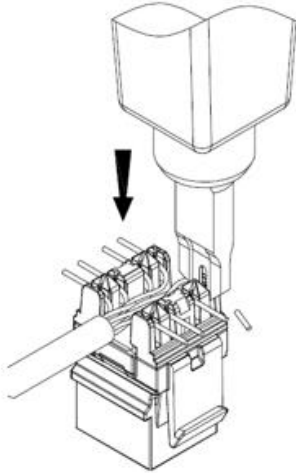


**ASSEMBLY INSTRUCTION**

<p>STEP 1: Strip off at least 1.2 inches of the jacket from the end of the cable.</p>	
<p>STEP 2: Press the wires through the projecting portion of the terminals until fixed.</p>	
<p>STEP 3: Terminate wires with punch tool. Make sure the tool cuts off the excess wires.</p>	
<p>STEP 4: Place the cap on the Jack and press to make sure it is fully seated. The cap opening allows the cable to enter the Jack from side or rear.</p>	