

75AR Connector for HELIAX® HJ5-50 Coaxial Cable




Description

This connector is designed for tab-flaring of the outer conductor and self-tapping (thread cutting) of the inner conductor of the coaxial cable.


Tools and Materials Required for Assembly

Knife	Metal snips
Flat file	Plastic head mallet
Hacksaw: fine-toothed blade	Plastic rod
Wrenches: (1) 5/16"	Screw driver
(2) 1-1/4" adjustable	


1 Prepare the cable as shown and make certain that the cable end is square. Use a straight-edged piece of paper wrapped around the cable to guide the knife when cutting the jacket. File the cut edges of the conductors to remove rough spots and deburr the end of the inner conductor. Hold the cable downward and tap lightly to remove particles.

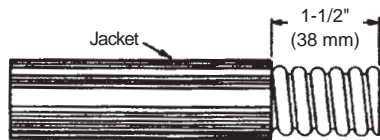


2 Screw the clamping nut onto the cable. Unscrew the clamping nut and mark the position at which the nut comes off the cable. This is the reference point for starting the clamping nut back onto the cable. Apply a thin coating of silicone grease to the threaded gasket and the inner surface of the clamping nut. Position the gasket to within 1/8" of the cable jacket. Screw the gasket onto the outer conductor as shown.

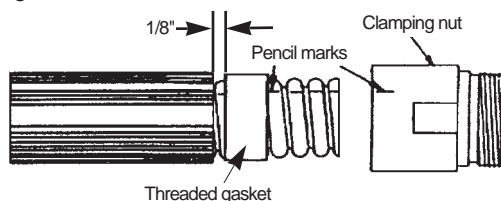


3 Align the pencil marks and push the clamping nut over the gasket. Screw the nut into place so that the outer conductor is slightly exposed as shown. This action pulls the gasket into the correct position. Wipe the silicone grease off the exposed outer conductor and cut tabs as shown.

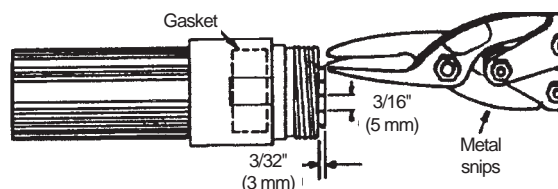


4 Flare the tabs of the outer conductor against the edge of the clamping nut by lightly tapping them with the rod and mallet. Use only enough force to flatten the tabs. Trim tab ends that protrude beyond the edge of the clamping nut.

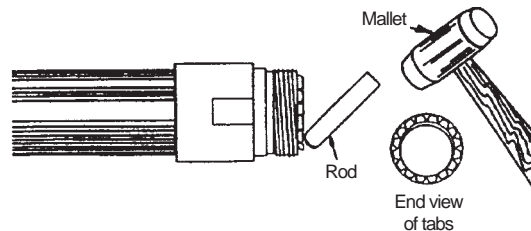


5 Screw the inner connector, while firmly pushing inward, into the inner conductor. Use a 5/16" wrench to turn the inner connector and apply solvent to the threads as a lubricant.

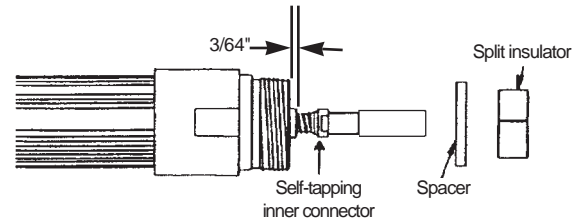

Place the spacer against the clamping nut and snap the split insulator in place on the inner connector and against the spacer.

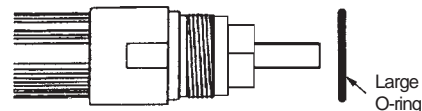

6 Apply a thin coating of silicone grease to the O-rings. Slide the large O-ring into the groove of the clamping nut. Lift the spacer, position the outer body over the insulator and spacer and screw the outer body onto the clamping nut. Tighten the connection with wrenches. Hold the clamping nut and turn only the outer body to 40-44 lb-ft (54-60 N-m).

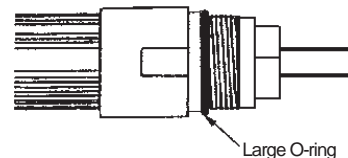

Notice

The installation, maintenance or removal of antenna systems requires qualified, experienced personnel. Andrew installation instructions are written for such personnel. Antenna systems should be inspected once a year by qualified personnel to verify proper installation, maintenance and condition of equipment.

Andrew disclaims any liability or responsibility for the results of improper or unsafe installation practices.

